 


Start

Voice Remote

 


1 Meet Your Remote

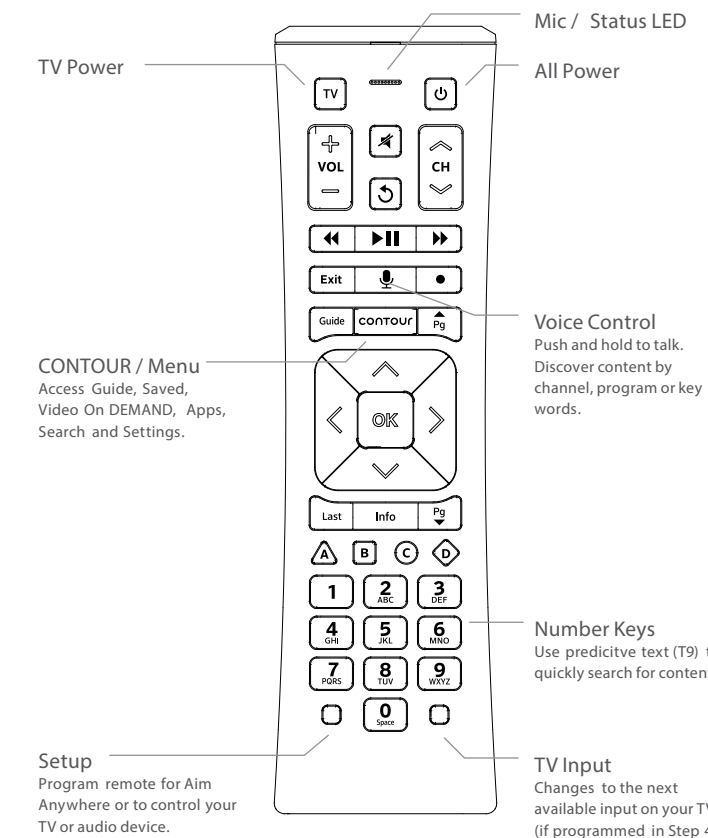


Turn On Your Remote

Your remote arrives with the AA batteries already installed, but not activated. Here is how to power it on for the first time.

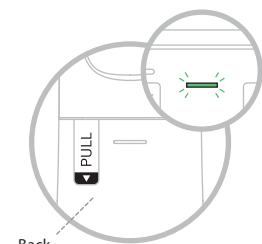

 
A Pick up your remote and remove the "Pull" tab (on back) by pulling away from the remote. The Status LED will blink green four times as the remote powers up (about 5 seconds).

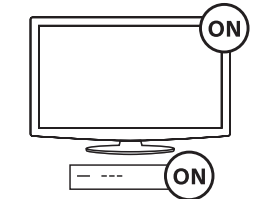

B Turn on your TV.
C Turn on your set-top box.


Pair Your Remote for Voice Control

 Use voice control to search for networks and shows, set DVR recordings, and get recommendations. See Step 5 of this guide for examples.

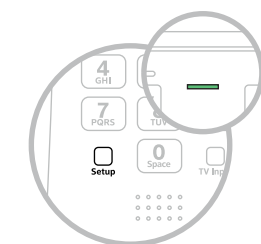

A Press and hold the Setup button (about 3 seconds) until the Status LED changes from red to green.

 B Press the CONTOUR button.

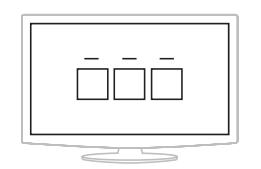


C Follow the on-screen instructions to enter the 3-digit code that appears.

Once the code is correctly entered, your CONTOUR Remote is paired with the device.


? Not working? Make sure the battery tab from your remote is removed, your TV is on and you are entering the correct 3-digit code on your TV screen.

 Control Your TV's Power and Volume

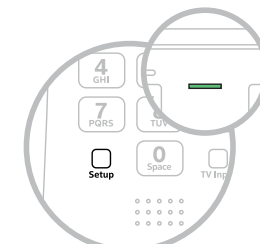


A Using the list on the right, find the first 5-digit code for your TV manufacturer.

 B Press and hold the Setup button (about 3 seconds) until the Status LED changes from red to green.

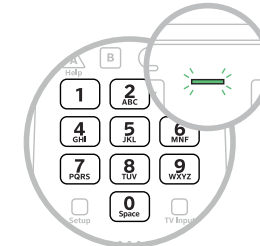

 C Enter the first 5-digit code for your TV manufacturer. The Status LED should flash green twice.

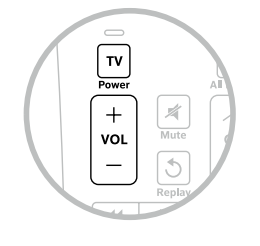

D Verify that the code was accepted by using your remote to adjust volume and turn the TV on and off.

Popular TV Manufacturer Codes

LG	10178, 11265
Panasonic	10051, 10250
Samsung	10812, 10060
Sanyo	10154, 10159
Sony	10000, 11100
Sharp	10093, 10165
Toshiba	10156, 11156
Vizio	11758, 11756

 
If your code isn't listed or you would like to control an audio device, visit remotes.cox.com.

? Not working? Try the second code listed. Still not working? Visit remotes.cox.com for a complete list of codes.


? Have an Audio Receiver or Sound Bar? If you would like to setup your remote to control your audio device or sound bar, visit remotes.cox.com.

Test Voice Control

Once your remote is paired with your set-top box, you can use voice control.

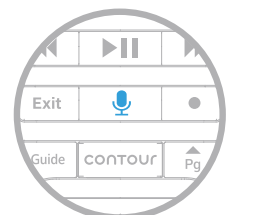

 A Press and hold the Voice button until you hear the audio tone.

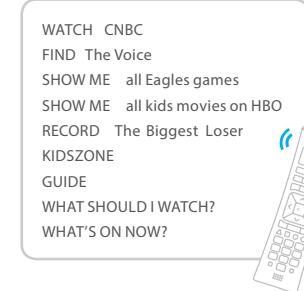

B Speak a voice command to the remote while continuing to hold down the button. Try one of the suggestions to the left. The Status LED will be solid blue while you speak your command.

C Release the Voice button when your command is complete. Look at the TV for the results of your voice command.

? Not working? Make sure you're pressing the Voice button while you speak into the remote, and release it when complete.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- ~~or relocate~~ the receiving antenna.
- ~~or increase~~ the separation between the equipment and receiver.
- ~~the equipment~~ into an outlet on a circuit different from that which the receiver is connected.
- ~~the circuit~~ for an experienced remote control /TV technician for help.

It is strongly recommended that the TV be plugged into a separate wall outlet.

The user is cautioned that changes and modifications made to this equipment without the approval of the manufacturer could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

"Caution" : Exposure to Radio Frequency Radiation. Antenna shall be mounted in such a manner to minimize the potential for human contact during operation to avoid the possibility of exceeding the FCC radio frequency exposure limit.

Radio Exposure Statement: This equipment complies with the FCC radiation exposure limits set forth for devices operating in an uncontrolled environment. This equipment should be operated with a minimum distance of 2 cm between the radiator and front of face. This equipment should not be placed directly on the ear when the speaker is active.