

REMOTE CONTROL USER'S GUIDE

Used to cycle through video inputs on TV or Audio Receiver

Used for special functions that are displayed on your cable menus

Accesses ON DEMAND program library


Displays program GUIDE

Returns to the previous screen

Controls and MUTE TV VOLUME

Displays a LIST of recorded programs

Used to SWAP DVR tuners

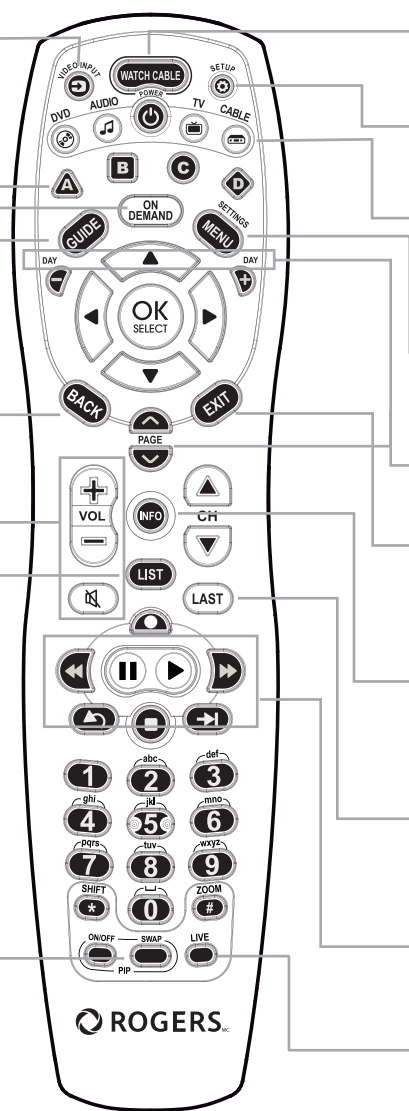

Turns ON/OFF equipment used for watching cable TV

Used to enter remote control SETUP

Remote controls the device related to whichever mode key was last pressed

Displays main cable MENU

Used in the program guide for PAGE and DAY navigation

Exits the current screen and returns to Live TV

Displays INFO for currently selected program

Returns to LAST channel you were watching

Controls PLAYBACK of live and recorded TV

Returns to LIVE TV

www.urcsupport.com

Comment démarrer

Note/Remarque: Make sure all home theater equipment is ON before starting remote control setup.

1 Remove battery cover.

2 Insert 2 AA batteries. Match the + and - marks.

3 Replace battery cover.

Tip/Astuce: The Mode Key will blink 5 times with each key-press when batteries need replacement.

Méthode A de programmation:

1 Press and hold SETUP until mode key blinks twice.

2 Press the mode key for device you wish to setup.

Tip/Astuce: If your brand does not appear in the brand chart, perform setup using either DIRECT CODE ENTRY or CODE SEARCH.

Marques connues

3 Find your device and brand from the charts below and note the DIGIT key assigned to your brand.

4 Let go of the key when your device turns off. Setup for that device is complete.



Table with 3 columns: DIGIT Numéro, TV/Téléviseur, DVD/VCR, and Audio/Audio. Lists various brands like Insignia, LG, Philips, etc.

RF Pairing:


Appairage RF :

This remote control is capable of controlling a set-top box(STB) that is hidden from sight when it has been paired with an RF STB or an RF Adapter.

Cette télécommande, lorsqu'elle est appairée avec un décodeur RF ou un adaptateur RF, est capable de contrôler un décodeur qui est à l'abri des regards.

Tip/Astuce: The STB or RF Adapter that you are using must be compatible with this remote control and the proper pairing method must be used.

Le décodeur ou l'adaptateur RF que vous utilisez doit être compatible avec la télécommande. Aussi, il faut utiliser la méthode d'appariage appropriée.

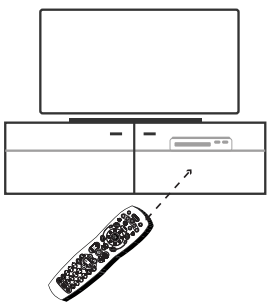

Codes: Television

Codes: Téléviseur

Large table listing brand names and their corresponding 4-digit TV codes for various manufacturers.

RF Pairing Setup Method B

Méthode B d'appariage RF

4-step process for RF pairing: 1. Put STB or adapter to enter pairing mode. 2. While holding down the CURSOR UP key, press and hold the SETUP key. 3. If you are pairing with an RF adapter, refer to the RF adapter instructions. 4. The LED on the remote will blink twice to verify success.

Setup Method C: Setup TV Control Using Direct Code Entry

Méthode C de programmation: Programmation du téléviseur par saisie directe de code

5-step process for Direct Code Entry: 1. Press the TV mode key. 2. Press and hold SETUP until TV mode key blinks twice. 3. Enter 1st TV code from your TV brand list. 4. Press the power button to test TV control. 5. Repeat process if TV does not turn off.

